The SCD-4 small cylinder drier provides a fast, efficient means of draining and drying small compressed gas cylinders after hydrostatic testing.

The SCD uses compressed air and hot water to drain and flash dry cylinders in under 2 minutes


Timer controls are programmable


0 – 999 seconds

Drain Air Hot Water

Detergent Dry Air



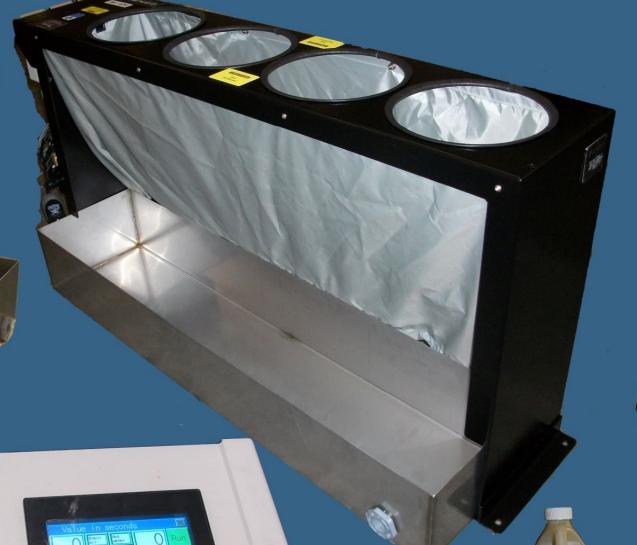

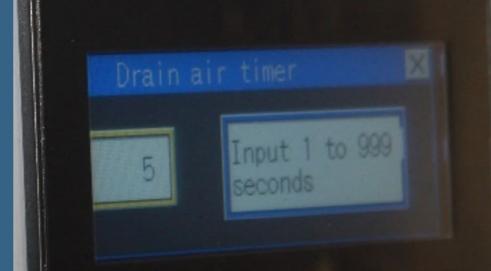



Basin and Curtain (-BAS)

Dimensions 60" L x 13" W x 30" H Electrical: 90-264VAC to 12vdc, 50/60 Hz

Capacity Up to 4 Cylinders

Max Cylinder Size10" dia x 30" tall

Air Requirements10.0cfm @90psi with <0.03 ppm contaminant.

(Recommend 80-11-0046 filter package – 0.01ppm)

Hot Water Required 5.0gpm@60psi, 180°F Max filtered

Available in Stainless Commonly used with Medical and Aircraft Oxygen Cylinders

*SD-13 Recommended
Detergent for Oxygen Cylinders

SD 13 LIQUID





